Service Data




Hydraulic Remote Pressure Compensator

PVB-5/6-**-CG-10/20 PVB-45A-CAG-10/-20 PVB-10/15-**-CG-10/-20 PVB-20/29-**-CG-10/-20



Hydraulic Remote Pressure Compensator

PVB-5/6-**-CG-10/-20 PVB-45A-CAG-10/-20 PVB-10/15-**-CG-10/-20 PVB-20/29-**-CG-10/-20

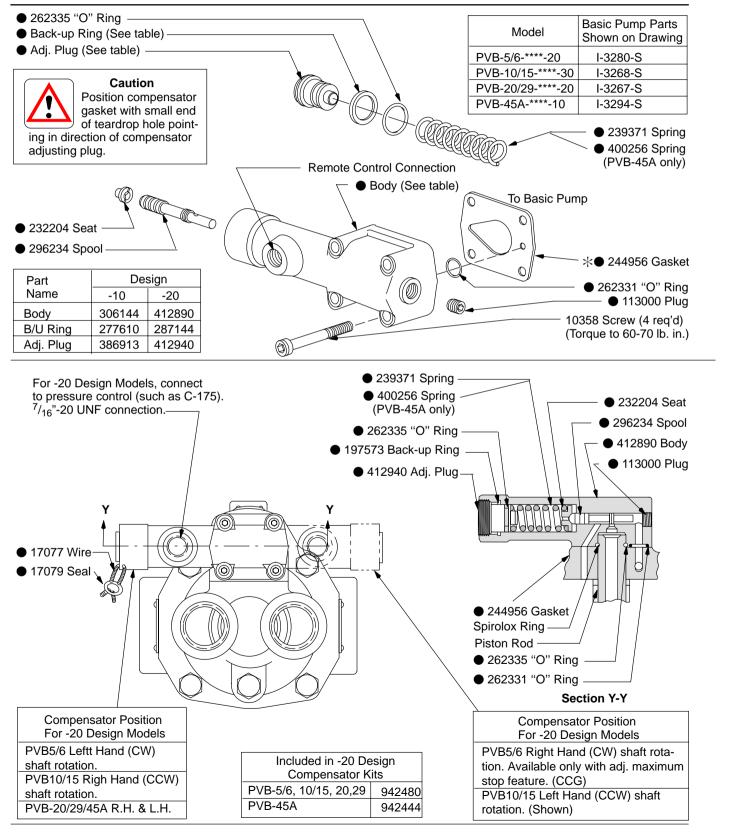

Compensator Adjustment Procedure

- 1. Turn remote pressure control (such as C-175) to minimum setting.
- 2. Turn compensator adjustment plug to minimum pressure (250 psi or higher).
- 3. Full pressure range can now be obtained with the remote pressure control.

Model Code Breakdown

Refer to parts drawings tabulated on the front page for model code information. All model code data pertains except for the control. C(*) is replaced by "CG" when the remote control compensator is used.

Parts Ordering Information

The -10 and -20 designs are shown on this drawing for comparison purposes. When ordering replacement parts for the CG compensator, note the -10 design parts are superseded by the -20 design parts listed in the table. All other parts are common to the -10 and -20 designs.

For satisfactory service life of these components, use full flow filtration to provide fluid which meets ISO cleanliness code 16/13 or cleaner. Selections from pressure, return, and in-line filter series are recommended.